

# DC Current Transducer DK-B420 U

Split core transducer for the electronic measurement of DC current, with galvanic separation between the primary circuit and the secondary circuit. 4-20 mA unipolar output current proportional to measured current.




#### **Electrical data**

Prima	ary nominal current I <sub>PN</sub> (At)	Output current <sup>1)</sup> $I_{\rm OUT}$ (mA DC)	Types	RoHS since date code
	50, 75, 100 100, 150, 200	4-20 4-20	DK 100 B420 U DK 200 B420 U	January 2007 February 2006
U <sub>c</sub> R <sub>L</sub> I <sub>c</sub>	Supply voltage Maximum load resista Maximum current con		20-45 500 100	V DC Ω mA
A	Accuracy - Dynami	c performance d	lata	
Χ ε <sub>L</sub> t <sub>r</sub> BW	Accuracy @ $I_{PN}$ , $T_A = 1$ Linearity error Step response time to Frequency bandwidth		± 2 ± 0.75 < 100 DC	% of FS % of I <sub>PN</sub> ms Hz
G	General data			
T <sub>A</sub> T <sub>S</sub> m IPxx	Ambient operating ten Ambient storage temp Mass Protection degree Sandards		- 20 + 8 120 IP 20 Safety IE	

<u>Notes</u>: <sup>1)</sup> The output excursion can be up to 23 mA without saturating <sup>2)</sup> For IEC 61000-4-3, IEC 61000-4-6 and IEC 61000-4-4 Criterion B: temporary impairment to operational behavior.

## I<sub>PN</sub> = 50 .. 200 A

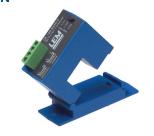

#### **Features**

- DC unidirectional measurement
- Split core case
- Three jumper selectable ranges
- Industry standard 4-20 mA current output
- Panel mounting
- Insulating plastic case recognized according to UL 94-V0.

## **Advantages**

- Large aperture
- Extended measuring range
- High insulation between primary and secondary circuits
- Easy to mount, cut installation costs
- No insertion loss (voltage drop).

## **Applications**

- Battery banks
   Load current monitoring
   Charging current monitoring
   Operation supervision
- *Power supplies* DC power or auxiliary loads measurement
- *Electric heating elements* Faster response than temperature transducers.

## **Application domain**

 Renewable Energies and Power Supplies.



## DC current Transducer DK-B420 U

#### Insulation coordination

U <sub>d</sub>	Rms voltage for AC insulation test <sup>1)</sup> , 50 Hz, 1 min	3	kV
U <sub>B</sub>	Rated insulation rms voltage <sup>2)</sup> , reinforced or basic insulation, CAT III, PD2	150	V

 Notes:
 1) Between primary (completely filling the primary aperture) and secondary

 2) If insulated cable is used for the primary circuit, the voltage category

 could be improved according to the insulation coordination given by the

 cable manufacturer. For example:

 Cable insulation (primary):
 Category:

 HAR 05
 600 V CAT III

 HAR 07
 1000 V CAT III

## Safety and warning notes

In order to guarantee safe operation of the transducer and to be able to make proper use of all features and functions, please read these instructions thoroughly! Safe operation can only be guaranteed if the transducer is used for the purpose it has been designed for and within the limits of the technical specifications. Ensure you get up-to-date technical information that can be found in the latest associated datasheet under www.lem.com.



## Caution! Risk of danger

Ignoring the warnings can lead to serious injury and/or cause damage! The electric measuring transducer may only be installed and put into operation by qualified personnel that have received an appropriate training. The corresponding national regulations shall be observed during installation and operation of the transducer and any electrical conductor. The transducer shall be used in electric/electronic equipment with respect to applicable standards and safety requirements and in accordance with all the related systems and components manufacturer' operating instructions.




## Caution, Risk of electrical shock

When operating the transducer, certain parts of the module may carry hazardous live voltage (eg. primary conductor, power supply). The user shall ensure to take all measures necessary to protect against electical shock. The transducer is a build-in device containing conducting parts that shall not be accessible after installation. A protective enclosure or additional insulation barrier may be necessary. The transducer shall not be put into operation if the jaw opening is open (split core version) or the installation is not completed. Installation and maintenance shall be done with the main power supply disconnected except if there are no hazardous live parts in or in close proximity to the system and if the applicable national regulations are fully observed.

Safe and trouble-free operation of this transducer can only be guaranteed if transport, storage and installation are carried out correctly and operation and maintenance are carried out with care.




## Dimensions DK-B420 U (in mm)

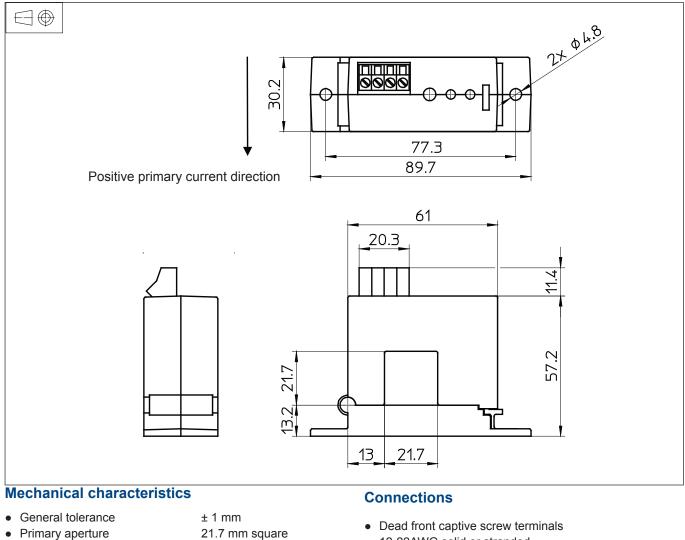

21.7 mm square 2 holes Ø 4.8 mm


77.3 mm

- Panel mounting Distance between holes
- Transfer characteristics
- DC unidirectional measurement <sup>1)</sup>

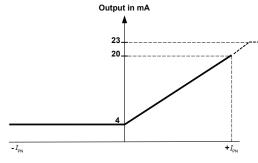

<u>Note</u>: <sup>1)</sup> The performance specified in the datasheet is valid within the 4-20 mA output range only.

- 12-22AWG solid or stranded
- Observe polarity
- Output loop is powered by DK transducer No loop power supply required.

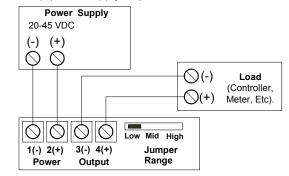

## **Option on request**

- DIN rail adaptor (ref.: F2.90.98.000.1) Remark
- Temperature of the primary conductor should not exceed 60° C.